



1200 Series

- Double wall construction
- 102mm thick Acoustic Modular Panels
- Structurally isolated
- Equipped with ventilation, lighting and jack panel
- Fast, clean installation
- Wide range of sizes and configurations available
- BS EN ISO 9001 quality registered
- Excellent value for money



audiometric booths

IAC 1200 SERIES AUDIOMETRIC BOOTHS PROVIDE THE OPTIMAL ENVIRONMENT FOR MEDICAL & SCIENTIFIC RESEARCH

IAC has been a World Leader in the design and manufacture of prefabricated acoustic booths and rooms for hearing testing and research for over 50 years. The IAC 1200 series is a popular choice worldwide. Users appreciate the high acoustic quality, flexibility and robust construction of IAC booths and rooms.

The IAC 1200 Series booths are constructed from a double layer of 102mm thick acoustic modular panels separated by a 100mm air gap and offer a high performance environment for a whole range of special tests and measurements including bone conduction tests, speech therapy and psychological tests.

NOISE REDUCTION & SOUND ABSORPTION

Noise Reduction*: The minimum allowable noise reduction of completely assembled rooms, as tested in accordance with ASTM Standards in a recognised independent and approved laboratory, as shown in the table below.

Sound Absorption: The composite sheet metal and sound absorbing assembly shall have a minimum overall noise reduction coefficient of 0.9 (1.10) based on laboratory tests in accordance with ASTM C423-77 as shown in the table below.



	OCTAVE BAND CENTRE FREQUENCY, HZ								
Noise Reduction, dB**	63	125	250	500	1K	2K	4K	8K	
1200-A Series Booths	37	52	64	80	93	>93	>93	>93	NIC 75
Sound Absorption Coefficient	0.38	0.94	1.19	1.11	1.06	1.03	1.03	1.04	(1.10) NRC 0.95



Noise reduction measurements shall be made in accordance with the following ASTM Designations: E596 and, where applicable, portions of E90 and E336.

*Defined as the measured difference between the sound pressure levels in a reverberant room, outside the booth and inside the booth.

**+ 3dB for field instrument accuracy.


NIC – Noise Isolation Class, single number rating system for noise-reduction characteristics.

Suite of 1200-A Series Audiometric Booths

1200 SERIES - STANDARD SIZES AVAILABLE

The IAC 1200 Series is a range of double walled booths for single or multiple occupancy.

- Door Opening: 838mm wide x 1857mm high
- Window Clear View: 750mm wide x 600mm high
- Ventilation: A further 370mm should be added to the height, width or length of the booth depending on the preferred location of the ventilation system.

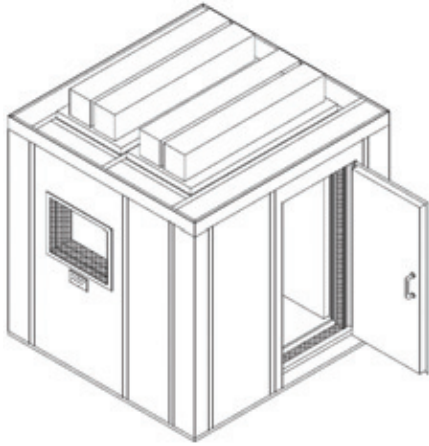


MODEL	INTERNAL			EXTERNAL			ROOM WEIGHT kg	VENT m ³ /min
	WIDTH mm	DEPTH mm	HEIGHT mm	WIDTH mm	DEPTH mm	HEIGHT mm		
1201-A	1224	1016	1995	1836	1628	2471	1840	2.85
1202-A	1930	1826	1995	2542	2438	2471	3410	2.85
1203-A	2235	2131	1995	2847	2743	2471	3990	5.66
1204-A	2740	2540	1995	3552	3152	2471	4940	5.66
1205-A	3050	2845	1995	3662	3457	2471	5625	8.50



Moduline® construction - all panels acoustically and structurally joined together by 'H' joiners

Wall or roof mounted ventilation system operated in conjunction with special ventilation panels

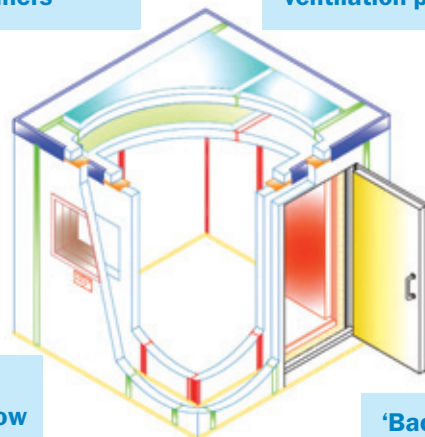

Quadruple glazed observation window

'Back to back' high performance acoustic doors

Inner chamber structurally isolated by means of a floating floor seated upon anti-vibration mounts

SPECIFICATION FOR IAC 1200 SERIES AUDIOMETRIC EXAMINATION & MEDICAL RESEARCH ROOMS

ROOF & WALL CONSTRUCTION – Roofs and walls shall be constructed from standard medical acoustic panels, 102mm thick. Outer panel faces shall be 1.6mm steel sheet while inner faces will be 0.7mm galvanised perforated steel sheet with 2.5mm diameter openings on 5.0mm staggered centres. Panels are reinforced and framed with 1.2mm channels. Average weight to be no less than 50kg/m².

FLOOR CONSTRUCTION – Acousti-Flote® floor shall be 50mm thick with 3.0mm steel sheet upper surface and 1.6mm steel sheet lower surface, structurally reinforced. All floors are carpeted. Average weight shall be no less than 51kg/m². Floors shall float on properly loaded vibration isolators rated for a natural frequency of 6.5 Hz for maximum elimination of structural noise.

ACOUSTIC INFILL – Floor, wall, door and roof panels shall be sound-retardant, absorbing, inert, mildew resistant and vermin proof. Heat transfer factor shall be no more than 0.397W/m² °C.

DOOR CONSTRUCTION – IAC Noise-Lock®, flush fitting, level swing doors with magnetic seals and pull handles shall be provided with a clear opening of 838mm wide x 1857mm high. Each door leaf shall be fabricated from 1.6mm thick steel on the outer and inner face and 1.6mm framing and reinforcing sections.

WALL & ROOF PANEL 'H' JOINERS – Wall and roof panels shall be acoustically and structurally joined together by 'H' joiners, constructed from 0.9mm steel shall maintain the acoustical integrity of the booth.

WINDOW CONSTRUCTION – Windows shall be 750mm x 600mm (sizes may vary in some orientations) consisting of two double glazed assemblies, using 6.0mm thick laminated safety glass, with 'pressure-sealed' aluminium trim frame.

JACK PANEL – A jack panel consisting of nine 6.4mm three-pole jack sockets shall be provided below the window. This jack panel shall be designed and installed to preserve the acoustic integrity of the booth.

ELECTRICAL – All booths are provided with lighting operated from an adjacent switch. A separate switch will control the ventilation system. Power operation 240V, 50Hz. (All cable supplied by others).

VENTILATION – All models shall have the ventilation system roof or wall mounted and be operated in conjunction with special ventilation panels. A further 370mm should be added to the height, width or depth of the booth, depending on the location of the system.

FINISH – All booths are supplied in a factory finish polyester powder coated condition. Colour: RAL 9002 Grey/White. All floors are covered in an anti-static carpet, colour: Light Blue.



IAC 1200-A Audiometric Booth

**IAC Ltd**

Tel: +44 (0)1962 873000
E-mail: info@iacl.co.uk

**IAC Colpro Pty Ltd**

Tel: +61 2 9896 0422
E-mail: info@colpro.com.au

**IAC China Ltd**

Tel: +86 (0) 755 83790190
E-mail: info@iac-china.com

**IAC Nordic A/S**

Tel: +45 36 77 88 00
E-mail: mail@iac-nordic.dk

**IAC Boët Stopson SA**

Tel: +33 (0) 3 20 05 88 88
E-mail: info@boet-stopson.com

**IAC GmbH**

Tel: +49 (0) 2163 99910
E-mail: info@iac-gmbh.de

**IAC Stopson Italiana SpA**

Tel: +39 02 48 44 22 1
E-mail: info@stopson.it

**IAC Stopson Española SA**

Tel: +34 (0) 9 33 21 66 84
E-mail: stopson@stopson.com

**IAC America Inc**

Tel: +1 (718) 931 8000
E-mail: info@industrialacoustics.com

www.industrialacoustics.com

OPTIONAL EXTRAS (Additional costs apply)

- Acoustic double glazed vision panel within door (150mm x 600mm high)
- Emergency light pack
- Internal power sockets
- RF and electrostatic shielding
- Fabric covering to internal walls
- Power filters
- Special jack panels, cut-outs and plugs
- Increased clear opening width doors (where possible)
- One-way viewing film fitted to window
- High frequency fluorescent lights
- Additional colour options are available for all panels and doors